


Prolux Tritan

INSTRUCTION MANUAL

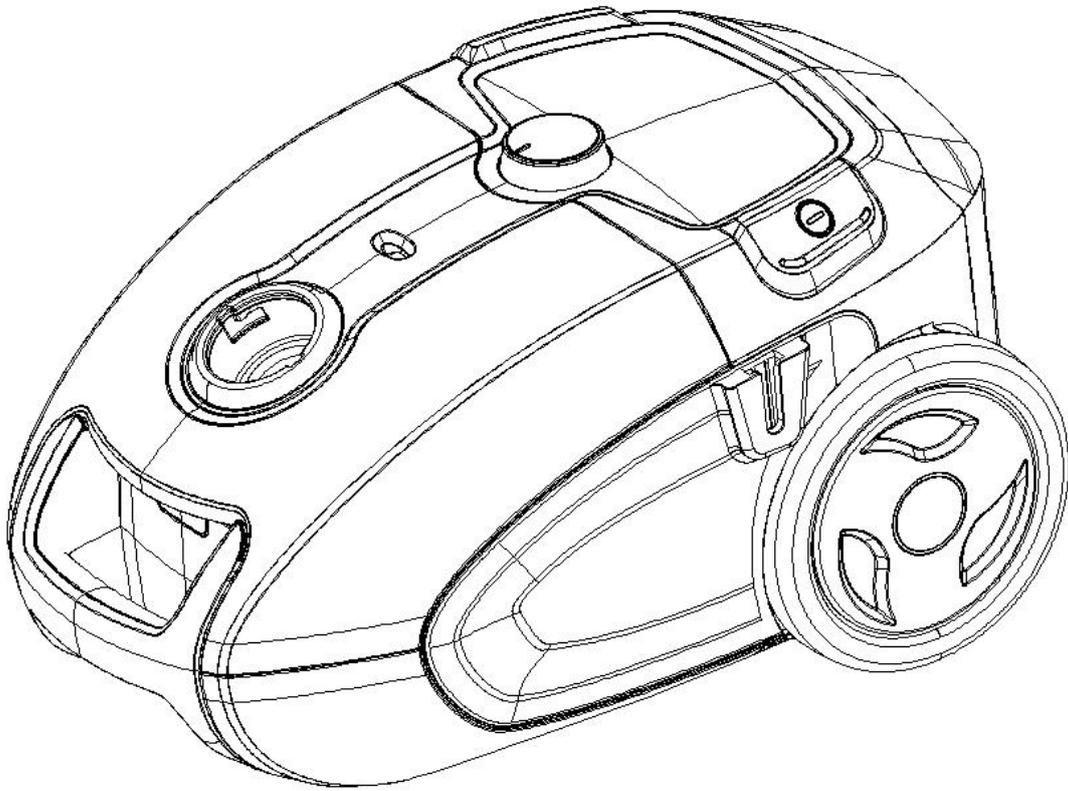

For your safety please read the Owners Manual in its entirety

Congratulations on your purchase of your new Prolux Tritan Vacuum! With the Prolux Tritan's adjustable operation speed you can clean any surface. It is super quiet, light weight and powerful. With its 1 year warranty, simple to use design, and easily attachable cleaning attachments it is designed to be one of your most used appliances.



Table of Contents:

| | |
|-------------------------------------|---|
| Product Specifications | 3 |
| Safety Instructions..... | 4 |
| Parts List & Unit Description..... | 5 |
| Assembly and Operation | 6 |
| Maintenance & Troubleshooting | 7 |
| Warranty Information..... | 9 |

Specifications:

- Adjustable suction speed allows it to be used on multiple cleaning surfaces from carpet, to hardwood to delicate dusting.
- Powerful – 12 amp motor has an amazing 98 inches of water lift suction.
- Full Bag Indicator tells you when the bag needs changed.
- Automatic cord rewind with 23 foot long cord.
- 6 foot long hose and 3 foot extendable wand allow the vacuum a vacuum radius of 34 feet from wall electrical outlet.
- Multi-level filtration with washable HEPA Filter.
- On board tools are large for maximum cleaning (35mm). Comes with floor tool for carpet or hardwood and the combi tool which can be used as a crevice tool, upholstery tool or duster tool.

Safety Instructions:


When using an electrical appliance, basic precautions should always be followed including the following:

1. Use only as described in this manual. Use only the manufacturer's recommended attachments.
2. Before the first operation, make sure the dust cup or the dust bag is properly installed. Do not use without dust compartment and filters in place. Change the dust bag immediately if it becomes damaged.
3. Do not use the machine without a motor protection filter filled.
4. Make sure the power supply is 110-120V~ 60Hz
5. Do not store or use the machine near high temperatures.
6. Do not leave the vacuum cleaner when plugged in. Unplug it from the outlet when not in use and before servicing. Turn off all controls before unplugging.
7. Do not use outdoors or on wet surfaces.
8. Do not allow it to be used as a toy. Close attention is necessary when used by or near children or infirmed persons.
9. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
10. Do not use if cord or plug become damaged. If the vacuum cleaner is not working as it should, or if it has been dropped, damaged, left outdoors or dropped into water, contact the service center for repair. Do not repair it yourself.
11. If there is an abnormal noise, smell, smoke or any other failure or breakage during operation, turn off the switch and unplug the vacuum. Contact the service center for repair. Do not repair the vacuum yourself.
12. Do not handle the plug or the vacuum cleaner with wet hands.
13. Do not put any objects into the openings. Do not use with any opening blocked: keep free of dust, lint, hair and anything that may reduce air flow.
14. Keep hair, loose clothing, fingers and all the parts of your body away from openings and moving parts.
15. Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes. Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
16. Use extra care when cleaning on stairs.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Parts List:

- One set of hose accessories
- One extendible tube
- One floor brush
- One integrated brush & nozzle

Description:

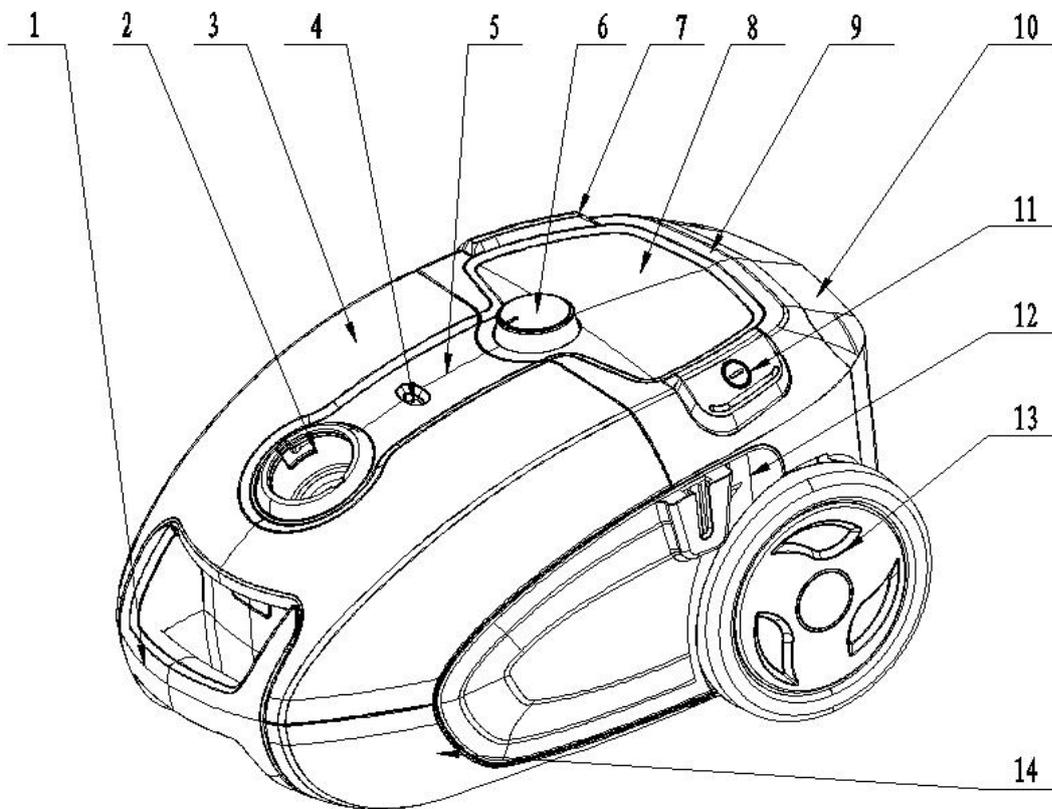

- | | | |
|--------------------------|------------------------|------------------------------|
| 1. Carrying Handle | 2. Hose Suction base | 3. Front cover |
| 4. Dust full indicator | 5. Tritan Design cover | 6. Speed control knob |
| 7. Cord rewinding button | 8. Tritan Design cover | 9. Back cover |
| 10. HEPA filter cover | 11. Power Button | 12. Floor Tool Carrying Hook |
| 13. Rubber Wheels | 14. Vacuum Base | |

Assembly and Operation:

1. Connect the hose accessories: insert the hose end into the hose socket on the front cover. Push down then twist to the right until it stops. (Fig 1)
2. Remove the hose accessories: Hold hose firmly and press down. Twist to the left and pull up. (Fig 2)
3. Connect the metal expansion tube to the curves end of the hose. (Fig 3)
4. Connect different nozzle tools to the tube for different cleaning purpose: floor brush (adjusted to the type of ground) for carpet or floor. (Fig 4); combined brush & nozzle for sofa, wall surface, curtain, corner or space between furniture and etc. (Fig 5)
5. Turn on the machine: insert the plug of cord into the power socket which conform to that on the label for power supply, and press the switch pedal, the machine will start working. (Fig 6)
6. Adjust suction power with speed control knob. (Fig 7)
7. Cord rewinding: hold the plug and pull out the cord; press the cord rewinding pedal, that power cord will be drawn in. (Fig 8)
8. The floor brush or nozzle can insert the brush hanger in the back of back cover when it is out of use. (Fig 9)



1



2



3



4



5



6



7




8



9

Maintenance:

1. Change the dust bag: when the Dust full indicator turns to be red, it is time to clear the dust or replace with a new bag. (Fig1)
2. Open the front cover by clipping. (Fig2,3)
3. Take out the bag holder then remove the full dust bag. (Fig4,5)
4. The motor protection filter should be removed and rinsed once a year, and can use it after dry. If the filter is damage, a new filter should be replaced. (Fig6,7)
5. Wash or exchange the outlet filter (HEPA): clip down and remove the outlet cover by hands for wash or exchange of filter. (fig8,9)

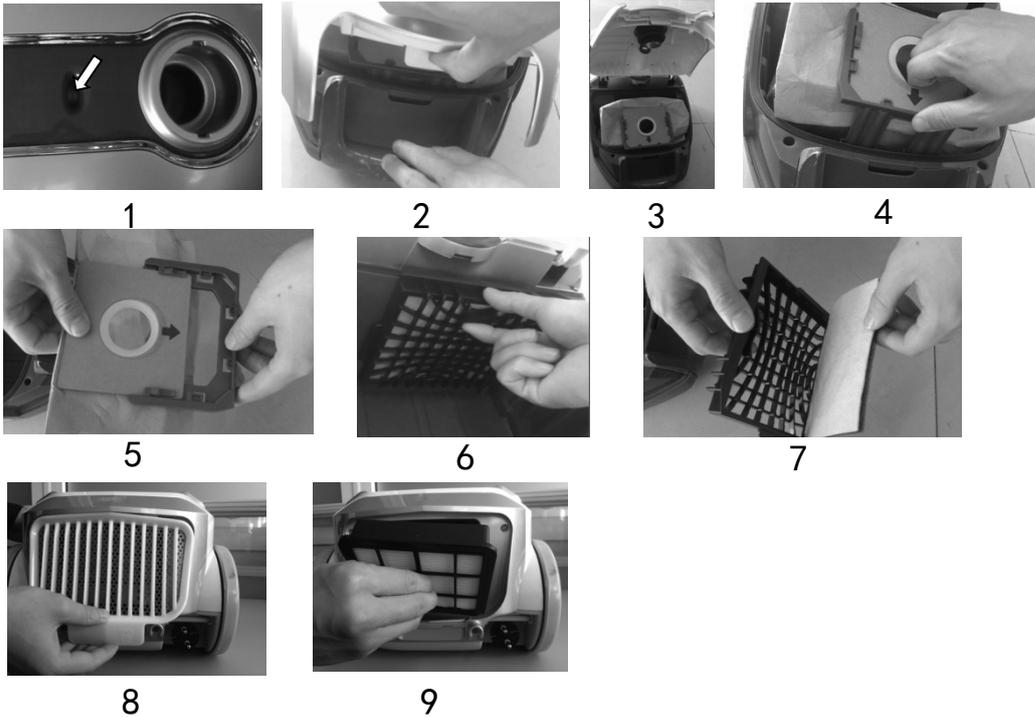

Warning

The plug must be removed from the power socket before any maintenance or replacement. If the power cord is damaged, replace them only by the factory or maintenance center or similarly qualified persons.

Troubleshoot:

Little or no suction

1. First make sure the adjustable suction control is turned all the way up. If there is still little or no suction, check disposable bag or HEPA filter. If they are full, empty them or replace them. If problem persists check for clogs in the hose and wand.
2. If blockage is found in the ground brush, hose or tubes, the machine can be re-operated only after the blockage is cleared away.
3. Vacuum Lid will not close. Make sure bag is properly installed so lid can be

installed.

4. Wands or tools fall out during use. Tools and wands use “Friction Fit” to connect together. This works by shoving the tool all the way on and firmly twisting to the right. Then to release simply untwist. When used properly in this manner tools will not fall off during use.

Warranty:

- The manufacturer Prolux provides warranty for a time period of 1 year starting from the date on which the appliance is sold to the end user.
- The manufacturer Prolux under warranty shall cover all parts and labor and customer shall be responsible for all shipping to and from authorized service center.
- The warranty does not apply to bags, belts, brushrolls, tools or filters as these items typically wear out over time and must be replaced by the user.
- The repairs under warranty may only be carried out by an authorized service center. In case of warranty simply contact your Authorized Dealer you bought the vacuum from.
- When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
- The warranty will not apply in cases of:
 - Non Normal wear and tear (i.e. commercial use).
 - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories, sucking up water.
 - Use of force, damage caused by external influences
 - Damage caused by non-observance of the user manual, e.g. connection to an unsuitable power supply or non-compliance with the installation instructions
 - Partially or completely dismantled appliances

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the United States and Canada. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems.